900 SERIES MOUNTING BRACKET INSTALLATION INSTRUCTIONS
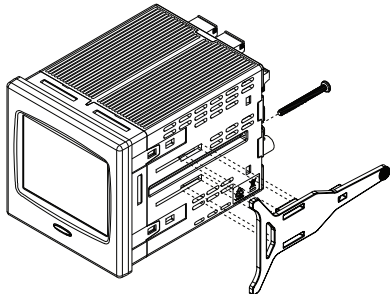
9MBVXX - 900 Series Mounting Bracket Vertical Mount

OPTION 1
- #8 SELF-TAPPING SCREW
- #8 FLAT WASHER
- 900 BRACKET
- MOUNTING SURFACE

OPTION 2
- #8 MACHINE SCREW
- #8 FLAT WASHER
- 900 BRACKET
- MOUNTING SURFACE
- #8 FLAT WASHER
- #8 LOCK NUT

2X Panel Clamp

900 Series Monitor

Vertical Mounting Bracket

Included Bracket Mounting Hardware

4X
8X
4X
4X

1X Panel Gasket

Breakout in bracket is for illustrative purposes only.

2X Clamp Screw

---
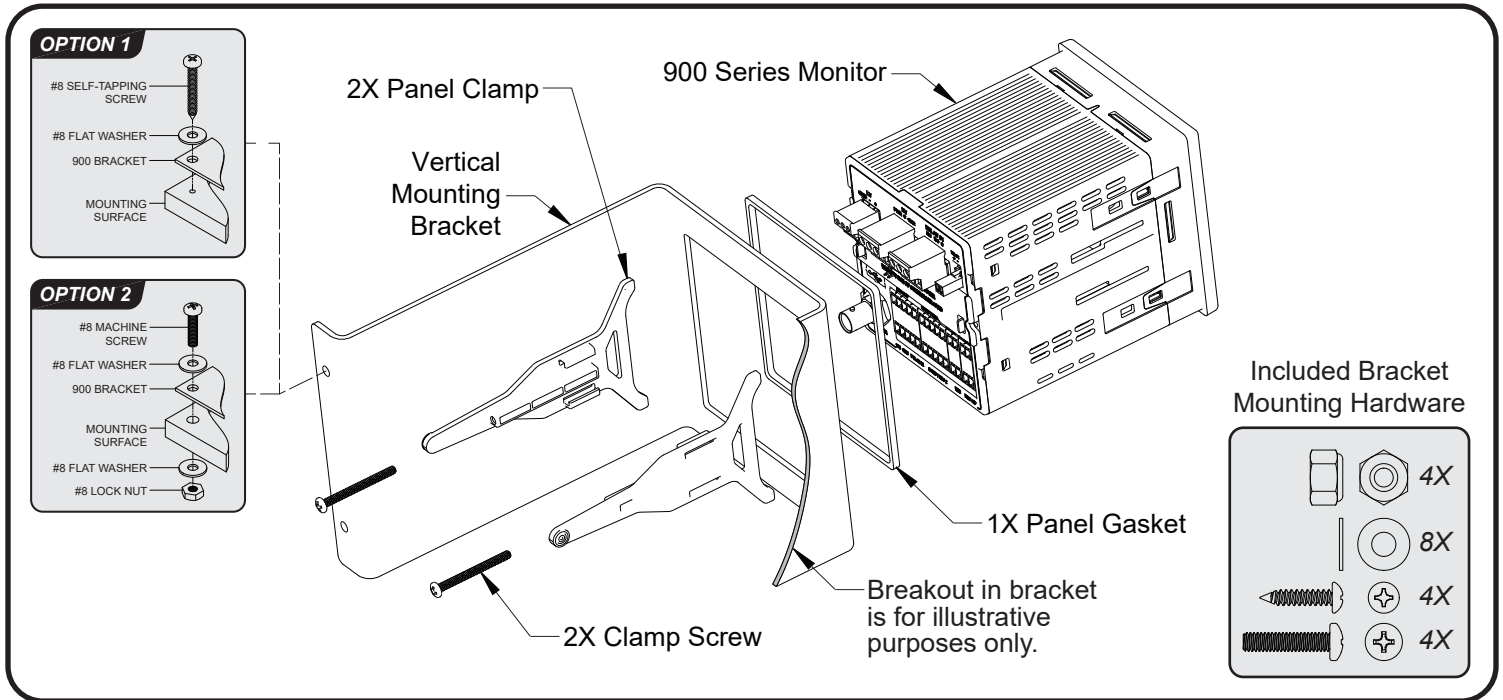
❶ Pre-drill holes using bracket as a template, or provided dimensions.

❷ Mounting holes may be enlarged to customer's desired size.

❸ It is advised to install the 900 monitor into vertical mounting bracket prior to attaching to wall.
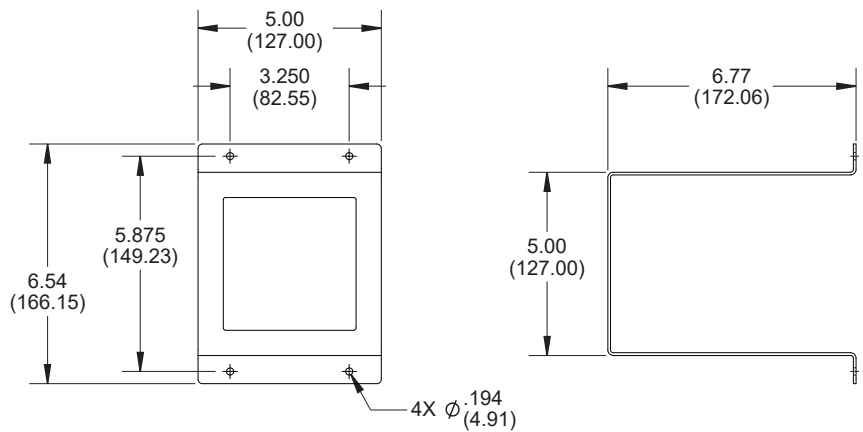
NOT TO SCALE
DIMENSIONS IN INCHES
(MILLIMETERS)

5.00 (127.00)
3.250 (82.55)
5.875 (149.23)
6.54 (166.15)
6.77 (172.06)
5.00 (127.00)

4X $\phi \, ^{.194}_{(4.91)}$

---

❹ Ensure that panel gasket is pre-installed behind bezel.
❺ Slide unit into bracket or panel.
❻ Install clamps into guides and slide forward.
❼ Install and rotate screws until clamp makes contact with panel.

---

❽ Continue tightening screws until gasket is evenly compressed to 50% of it's original thickness.

.05" (1.26mm)

MYRON L® COMPANY

9MBVI 11-19