

# U2CI™ Software – Quick Start Guide Addendum

For bluDock™ enabled Digital Handhelds.

Version 3.0.3 for Windows 8 and Later

This Quick Start Guide Addendum will explain how to download the U2CI application from the Myron L® Company website and install the U2CI Application on computers running the Windows 8 (or later) operating system.


This is an addendum to the **U2CI™ Software – Quick Start Guide Version 3.0.3 for Windows XP and Windows 7** guide (P/N U2CIV3QS-WIN). Please read that document completely before preceding.

## SYSTEM REQUIREMENTS:


- Windows 8™ (or later) OS with most recent updates installed.
- Microsoft .NET Framework version 4 or later.
  - If .NET is not already included in your Windows 8 (or later) installation it may be downloaded for free from Microsoft's Download Center
- Disk Space: 40 MB of free disk space.

## INSTALLATION:


1. Download the U2CI Application from the Myron L® Company website @: [http://www.myronl.com/main/U2CI\\_Application\\_DL.htm](http://www.myronl.com/main/U2CI_Application_DL.htm)
2. Double click on the link titled: U2CI\_r3.03\_Windows.exe.
3. Depending on the security settings of your Windows users account you may see the following dialogue box appear:

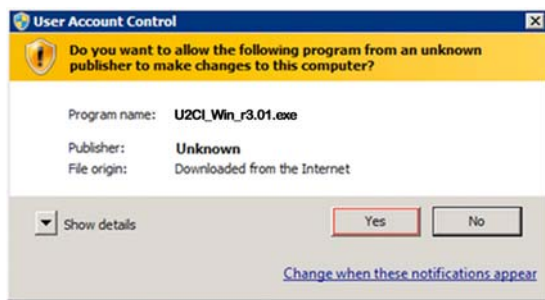

4. Click "**Yes**".
5. Once the file has been downloaded, open up the **Downloads** folder of your Windows 8 (or later) system.
6. Right click on the **U2CI WIN Inst** file.
  - A drop down menu will appear.
7. Select **Properties**.

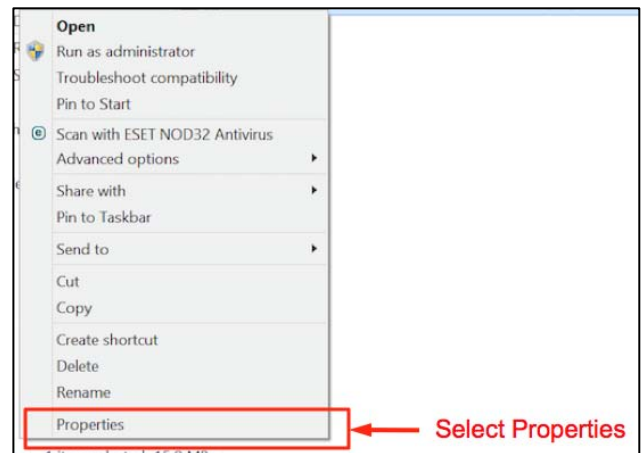

8. Select the **Compatibility** Tab.
9. Check the **Run the program in compatibility mode for:** box.
10. Select **Windows 7** from the Windows OS drop down menu.
11. Click the **Apply** button at the bottom of the **Properties** window.
12. Double click on the Link titled: U2CI\_r3.03\_Windows.exe
13. The standard Windows Installation Wizard will launch.
  - **ALWAYS** install the U2CI program in the "**Program Files (x86)**" folder.
14. If a previous version of the U2CI program is present in the Applications folder, the following dialogue box will appear:

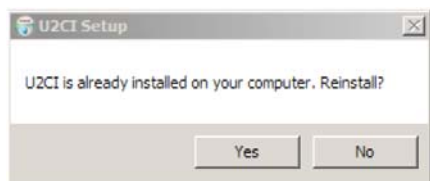

15. Click, "**Yes**".
16. Once the installation wizard has finished running, click, "**Finish**".

