
# **RESISTIVITY SENSOR #CS10**

# For 750II Resistivity Monitor/controllers





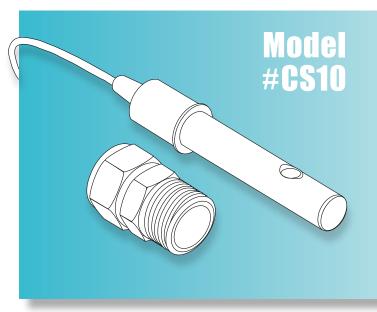

- Small size enables convenient installation and service.
- Dual O-ring seals used on all versions for high on-stream reliability.
- Plastic gland fitting allows removal and replacement without tools.

MODELS: CS10 and CS10LS

## **BENEFITS**

- · Economic Value
- · Small, Convenient Size
- · 100 psi at 100°C
- · General Purpose Use
- · Field Replaceable

# DESCRIPTION

Wetted materials of construction are 316 stainless steel and Teflon®\*, with double O-ring seals at all points. The first EPR O-ring bears the brunt of process interface, allowing the second O-ring to maintain

reliable sealing, free from chemical attack. An integral temperature element allows automatic compensation for maximum accuracy. Leads are 10 ft./3 meters standard.

Process connections are made via a bored through swage 3/4" NPT fitting as standard. This fitting may be installed into a line or tank, or may be reversed and connected to a standpipe for use in a submersion configuration.

The CS10 was designed primarily for use in pure water applications.



Assembled Resistivity Sensor


For more information, please visit our website at www.myronl.com



<sup>\*</sup> Teflon® is a registered trademark of DuPont.

## **SPECIFICATIONS**

Maximum Pressure/ Temperature Ratings	100 psi/6,9 bar at 100°C/212°F 200 psi/13,8 bar at 120°C/248°F with 316SS Fitting	Connections: Polypropylene Process Fitting	1/2" and 3/4" NPT compatible with BSP  3/4" NPT Standard  1/2" NPT Stainless Steel  1/2" NPT PVDF  Plain tinned wire ends, 22-24 gauge.	
Wetted Materials: Insulator	Teflon®	Options		
O-rings	EPR	Electrical		
Electrodes	316 Stainless Steel standard, optional materials available upon request.	Sensor Constant: Model	Range	Constant
Fitting	Polypropylene, 316SS, or PVDF	CS10 CS10LS	0-200 KΩ to 0-20 MΩ 0-200 KΩ to 0-20 MΩ	0.05 0.05
Temperature Compensation	5.49 KΩ & 100 KΩ @ 25°C/77°F RT100 & RT1000 available upon request.			

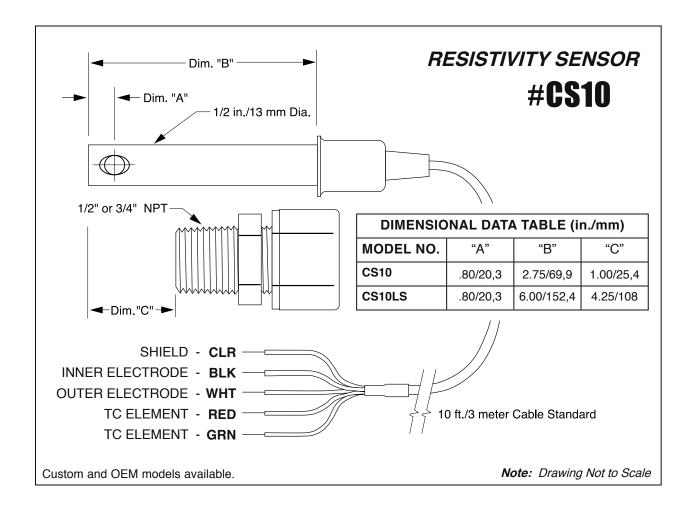

## **LIMITED WARRANTY**

All Myron L resistivity sensors have a Two (2) Year Limited Warranty. If sensor fails to function normally, return the unit to the factory prepaid. If, in the opinion of the factory, failure was due to materials or workmanship, repair or replacement will be made without charge. A reasonable service charge will be made for diagnosis or repairs due to normal wear, abuse or tampering. Warranty is limited to the repair or replacement of the sensor only. The Myron L® Company assumes no other responsibility or liability.

2450 Impala Drive Carlsbad, CA 92010-7226 USA Tel: +1-760-438-2021

Fax: +1-800-869-7668 / +1-760-931-9189 www.myronl.com

Built On Trust. Founded in 1957, the Myron L® Company is one of the world's leading manufacturers of water quality instruments. Because of our commitment to product improvement, changes in design and specifications are possible. You have our assurance any changes will be guided by our product philosophy: accuracy, reliability, and simplicity.

